Temperature & Humidity Monitoring

Thermal (Advanced)



Product Description

Thank you for buying our product MURAQEB-Thermal Advanced.

MURAQEB-Thermal Advanced consists of a Logger Unit and Wireless Sensors. The Logger Unit collects Temperature & Humidity measurements from the surrounding Wireless Sensors and stores them. These measurements are also uploaded to the cloud.

MURAQEB connects to the internet via WIFI.

MURAQEB can be monitored via your PC/mobile from local network or over the Internet.

MURAQEB Advanced can issue alerts for high/low Temperature & Humidity and can send them over emails, SMS Messages, or Phone Calls as per your preferred settings.

MURAQEB can present measurements in Excel format and graphs.

MURAQEB uses Sensors with Long-Range Bluetooth Technology which can reach ~100m in an open space. Sensor battery lifetime 18~24 months replaced by standard batteries.

The accuracy of the Sensors is unbeatable, $\pm 0.2^{\circ}C$ (T) / ± 2 (%H).



Warranty

- Product warranty: 2 years.
- This product is warranted to be free of defects in material and workmanship during the warranty period starting from the date of purchase.
- This warranty does not extend to any defect, malfunction or failure caused by the below. In such cases, AFKAR DIGITAL shall not be liable for any replacement or any compensation caused by the incompliance or misuse of the device:
 - The misuse which is not complying with the Safe Operating Instructions.
 - Malfunction related to over-voltage/instability of the AC Electricity.

Temperature & Humidity Monitoring



Safe Operation Instructions

Please read the Instructions for Safe Operation carefully before using this product.

- Keep the Logger Unit and Sensors out of reach from children or infirm persons.
- Take care while handling this product to avoid any mechanical or electrical damage.
- Ensure that the Logger Unit is mounted in a stable horizontal or vertical position as per the instructions.
- If the Electrical Adapter is damaged or malfunctioned, replace it by another Adapter of same type (micro-USB) rated 5V/3A. Contact your local dealer for replacement.
- Any Electrical Adapter used with this product must comply with relevant regulations and standards applicable in the country of intended use.
- MURAQEB is for Indoor use only. Outdoor use is strictly prohibited.
- DO NOT expose MURAQEB to rain as it will result in electrical hazards.
- DO NOT install MURAQEB in a dusty place.
- DO NOT expose MURAQEB to water or moisture.
- DO NOT expose MURAQEB to high intensity light sources (e.g., xenon flash or laser).
- DO NOT expose MURAQEB to heat from any source and DO NOT expose to fire.
- Clean the Logger Unit and Sensors using a dry cloth.
- Do Not try to open the Sensors or Logger Unit as this will result in cancelling Warranty
- Contact your local dealer for replacing the batteries of the wireless sensors.

Disposal

Do not dispose electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed in landfills or dumps, hazardous substances can leak into the groundwater and get into the food supply chain, damaging your health and well-being.

Compliance

CE / FCC

Temperature & Humidity Monitoring

Thermal (Advanced)



1. Installation

You can download the Installation and Configuration Manual, including viewing the Demo Videos from our website: http://www.afkardigital.com >> Products >> Mini Products

- 1. Open and check what is inside your MURAQEB box
 - Product Description, Warranty, & Safe Operation Manual
 - 4 screws with anchors.
 - Wireless sensors & double-face stickers. The number of sensors can be from 2 to 5 according to your order.
 - WIFI Logger Unit.
 - Electrical adapter rated 5V/3A.



- 2. Take out the Logger Unit from the box.
- 3. Decide where you want to mount the Logger Unit, options are:
 - Vertical mounting on a wall using the attached screws with anchors.
 - Horizontal mounting on a clean surface, shelf, table.
 - Vertical mounting on a D25 rail for industrial use.









Temperature & Humidity Monitoring



Thermal (Advanced)

- 4. Take out the electrical adapter from the box, connect it gently to the DC-IN Socket of the Logger Unit. Pay attention to the right direction.
- 5. Connect the adapter to an AC socket. Use a Power Extension If needed.





- 6. Take out the wireless sensors from the box.
- 7. Notice the small push button at the back of the sensor
- Press gently on the push button for (~4 seconds) until you see a blue light illuminated at the front of the sensor. The blue light will illuminate continuously for ~4sec and then disappears. The sensor now is turned ON.



- 9. Repeat the same steps for all wireless sensors coming with MURAQEB.
- 10. Mounting the Wireless Sensor
 - Fix the double-face sticker at the back of the sensor and mount the sensor vertically at any smooth place. Mount firmly.



• You can mount the Sensor horizontally on a clean surface, shelf, table.







• Ensure the sensor head is facing the air flow so that the sensor can measure temperature & humidity correctly.



Temperature & Humidity Monitoring

C•

AFKAR Digita

- Internet of Things

2. Configuration

2.1. Creating your Cloud Account

- 11. In your web browser, type https://hudhud.smarturdon.com/
- 12. Click on Register as a new user.
 - Fill in Username / Password
 - Fill in a valid email address & a working mobile number

Note: By filling a valid phone number you will receive important information about your product thru SMS messages.

13. Click on Register

Use your a	ccount to log in.
Username Password	
Register as a ne	Log in

14. A confirmation email will be sent to your inbox. For GMAIL, this might take up to ~3min. Pls also check your **Junk/spam** folders.

Thermal (Advanced)

- 15. Once you receive the email, click on the link provided to activate your account.
- 16. If you see as in the aside, it means your account has been created successfully.

2.2. Adding MURAQEB Advanced to your Cloud Account

- 17. In your web browser, type https://hudhud.smarturdon.com/ and login to your account which you have just created in the previous step.
- Your subscription determines the number of users who can simultaneously access MURAQEB thru the internet. Select any user ID, later you can give names to the IDs for more convenience.

Select your user id	1 : Ibrahim 🔹
	1 : Ibrahim
	2 : Salem
	3 : Hesham

- 19. To start adding MURAQEB to your account, click on "+"
- 20. Fill in the Serial No. of MURAQEB which is labeled at the back of the Logger Unit, then click on "Check".



Your account has been activated. Please Click here to Log in

Temperature & Humidity Monitoring



Thermal (Advanced)

- 21. If the Serial No. you filled is correct, the pictures of MURAQEB (Logger Unit and Sensors) will be displayed along with other information.
- 22. Click on "Add" to add this MURAQEB to your account and then click on "Back"



23. You can now see your MURAQEB device listed in your Cloud Account.

	Cloud Data 🗣 Accour	וד				Helio - User Log off
ontroller Name	Serial Number	Number of Connected Devices	Last Heart-beating message (GMT)	Web Access Expiry	Storage Period on Cloud	+
ontroller123	00000005a0d0899	3	10/10/2020 14:00:42	31/12/2021	30 Days	0 D UPDATE

2.3. Accessing & Activating MURAQEB Advanced

- 24. Ensure that the Logger Unit is connected to the AC adapter.
- 25. Check available WIFI networks from your PC or mobile. You should see the WIFI of MURAQEB like the example aside. The WIFI of MURAQEB will show up after ~one



minute from powering the Logger Unit and it will include the serial No. of your MURAQEB at the end of the name.

- 26. Select the WIFI of MURAQEB, then fill in password 12345678
- 27. To ensure you camped on the WIFI of MURAQEB, the network view should be like below.







28. In your web browser, type http://192.168.99.1 to access MURAQB thru the local network. Login as:

> Username: admin Password: admin (Later you can change the password)

29. Your browser will direct you to the WIFI Setup page where you need to define the local WIFI network inside MURAQEB. Initially, under WIFI Network Status there will be no defined WIFI, and the WIFI IP address of MURAQEB will be showing No IP.

Login		Smart Hudhud Controller
User Name	admin	Monitor and Control Anything over the Internet
Password	•••••	Total MONITOR in front of your eyes
	Login	Total CONTROL at your fingertips
	_	

× +

Network	Status
IP Address	No IP

- 30. Under WIFI Selection
 - Select WIFI Name, fill in Password, and click on Save.
 - If WIFI password you filled is correct, "Saved Successfully" will be prompted.

WIFI Selection	
WIFI Name	SANAFER-O -33
Password	
Save	Saved Successfully

31. Refresh your browser page. Under WIFI Network Status you will see a valid IP address and the name of the WIFI you selected.

Network Status				
IP Address	192.168.0.177			
Current WIFI	"SANAFER-O"			
WIFI Level	-30 dBm Excellent			
MAC Address b8:27:eb:58:5d:cc				

32. Go to Settings >> Cloud Account. Fill in same Username and Password when you created your account (as in step 12). Click then on "Check"



Monitoring



33. If account information you filled is correct, MURAQEB will prompt a successful message and will restart.

Controller ID : 000000	0005a0d0899	Controller ID : 0000000	05a0d0899
User Name	ibrahim123	User Name	ibrahim123
Password	•••••	Password	••••
Check	Saved Successfully	Check	Program is restarted
4		•	

- 2.4. Monitoring MURAQEB Advanced from Local Network
 - 34. Reconnect your PC/mobile back to your local WIFI network (same one defined for MURAQEB)
 - 35. By this time, **MURAQEB** should have finished restarting.
 - 36. In your web browser, fill in the IP address of MURAQEB (found in step 31). Login as before:
 - Username: admin
 - Password: admin

 ← 192.168.0.177/Login/Index.html ★ → C △ ▲ Not sec ce 192.168.0.177/Log n/Index.html 				
Login		Sma		
User Name	User Name admin			
Password •••••		Total M		
	Login	Total (

37. You will be able to see all the Temperature Sensors connected to MURAQEB from the local WIFI.



Temperature

& Humidity

Monitoring

Thermal (Advanced)



Monitoring MURAQEB Advanced thru the Internet 2.5.

- 38. In your browser, type https://hudhud.smarturdon.com to access your account.
- Select your 1: Ibrahim • user id 2 : Salem 3 : Hesham
- 39. Login and select the User ID/Name from the drop menu.
- 40. Select which MURAQEB you want to monitor from the list.



- 41. You should be able now to monitor MURAQEB vou selected thru the Internet.
- 42. To add another **MURAQEB** to your account, you need to repeat Parts (2.2 and 2.3) only.



Shutting Down MURAQEB Advanced & Turning OFF Wireless 3. Sensors

If you do not want to use MURAQEB for some period or need to move MURAQEB from one place to another. You need to do below 2 steps:

Shutting down MURAQEB Advanced Safely 3.1.

- 1. Login to MURAQEB, either from local network or remotely.
- 2. Go to Settings >> Controller. Scroll down to Controller Management.
- 3. Click on "Shut down the Device".
- 4. Wait for ~one minute then disconnect the electrical adapter from the Logger Unit and then unplug the adapter from the AC source.



Temperature & Humidity Monitoring





3.2. Turning OFF Wireless Senores to extend Battery Lifetime

- 1. Notice the small push button at the back of the sensor.
- Press gently on the push button for (~4 seconds) until you see a blue light flashing at the front of the sensor. The blue light will flash for ~3sec and then disappears. The sensor now is turned OFF.
- 3. Repeat the same steps for all wireless sensors you want to turn off.



4. Operating MURAQEB Advanced

You can learn more about Operating **MURAQEB** and its Features by viewing the Tutorial Videos form our website: http://www.afkardigital.com >> Products >> Mini Products

- Creating Cloud Account
- Configuring MURAQEB
- Displaying Graphs / Tables
- Setting Alerts (IFTTT) for Email/SMS/Phone Calls
- Filling Usernames inside MURAQEB
- Checking your account balance
- Selecting Forms
- </u> Making Favorites Menus
- Setting Refresh Timer/Storage Timer
- 4 Setting Storage Period
- Upgrading MURAQEB Software
- **4** Backing up/Restoring MURAQEB configuration to/from cloud
- Restarting, Rebooting, and Shutting down MURAQEB
- Other Settings, and more...



Contact us for any queries or information related to MURAQEB Replacing Sensor Battery Ordering more Sensors Technical Issues Any Further Queries & Information

